Hafny

FR08 Installation

1 This mirror fits handlebars with a 14.8–23 mm inside diameter. Check your handlebar to see if the spacer is needed.

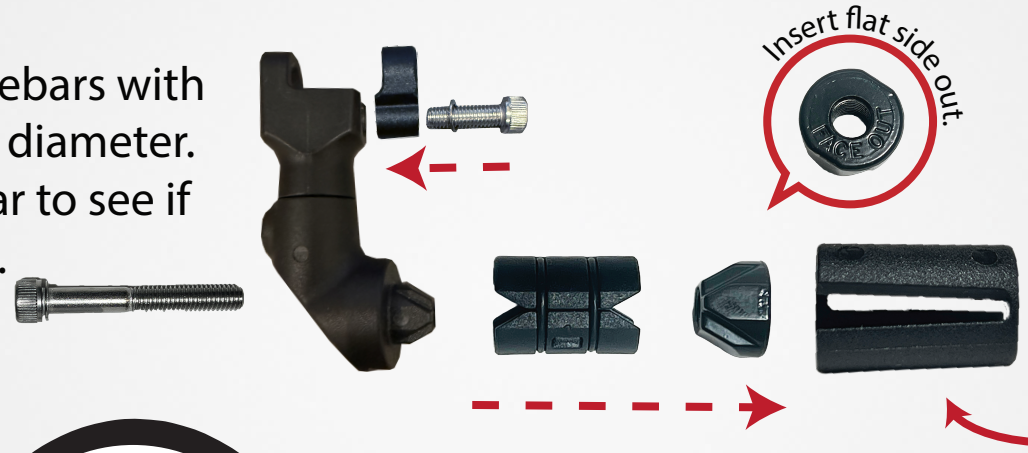

Use spacer if handlebar inside diameter is over

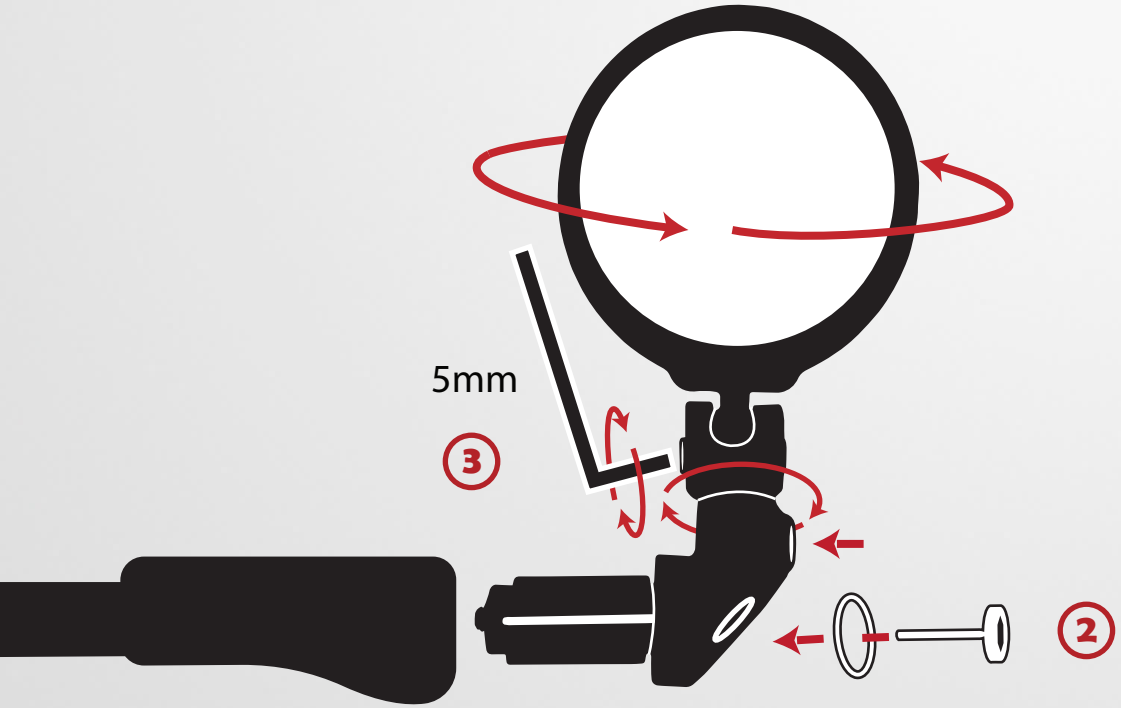

2 Remove the handlebar plug. Place the mirror arm into the handlebar. Rotate it to your preferred position and tighten it securely.

3 Insert the mirror head into the arm and tighten the screw, adjusting it to the desired angle.

Let's go for a ride!